

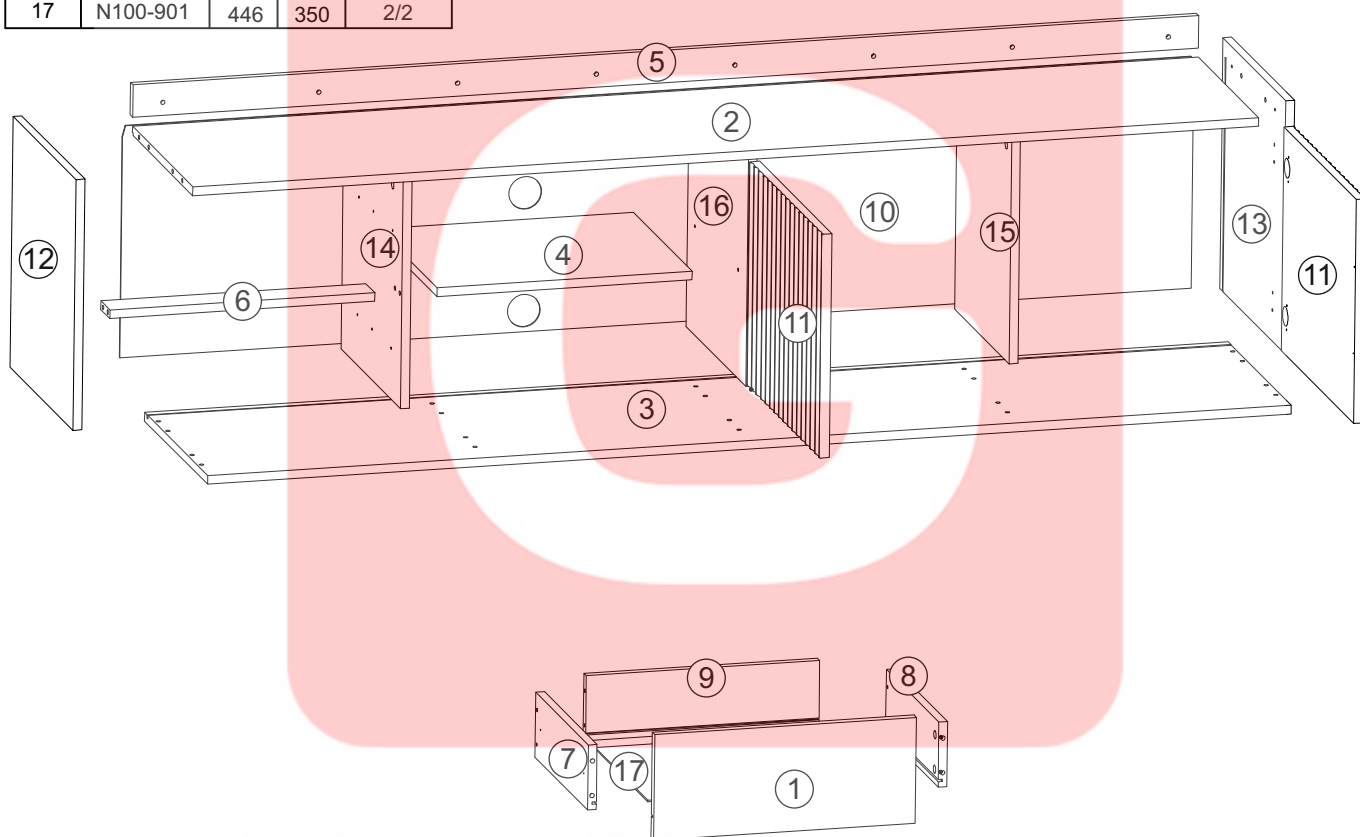


A	B	C	D	
1	N100-001	483	196	1/2
2	N100-205	1967	402	1/2
3	N100-202	2000	420	1/2
4	N100-301	471	392	1/2
5	N100-401	1967	60	1/2
6	N100-402	489	60	1/2
7	N100-501	350	120	1/2
8	N100-502	350	120	1/2
9	N100-503A	431	120	1/2
10	N100-902	1977	429	1/2
11	N100-002	414	482	2/2
12	N100-101	464	420	2/2
13	N100-102	464	420	2/2
14	N100-103	420	397	2/2
15	N100-104	420	364	2/2
16	N100-105	420	397	2/2
17	N100-901	446	350	2/2



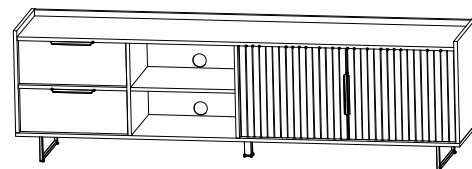


GERBOR.KIEV.UA

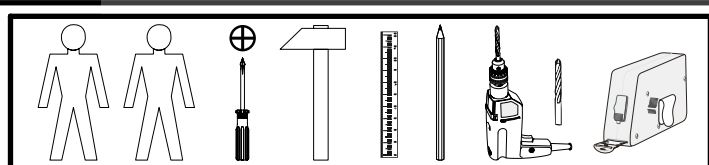


4x c818	9x l1	8x Ø3,5x15 mm p51	1x z1	20x l2	18x Ø15x12 mm #16 r1	18x r42	24x Ø8x30 mm f1
4x 350 mm w207/1	4x 350 mm w207/2	18x Ø7x50 mm e1	12x Ø3,5x12 mm p140	12x Ø6x13 mm e3	8x Ø5x50 mm e32	4x Ø5x17 mm d1	18x Ø16 s2
8x Ø3,5x13 mm p1	4x K16 a43	4x b19	16x Ø3,5x16 mm p38	2x k129	1x k38 ⁷	1x k38 ³	1x Ø 6,3x13 mm e2


§2

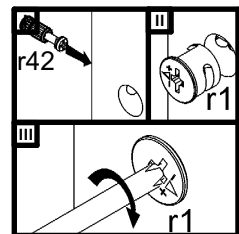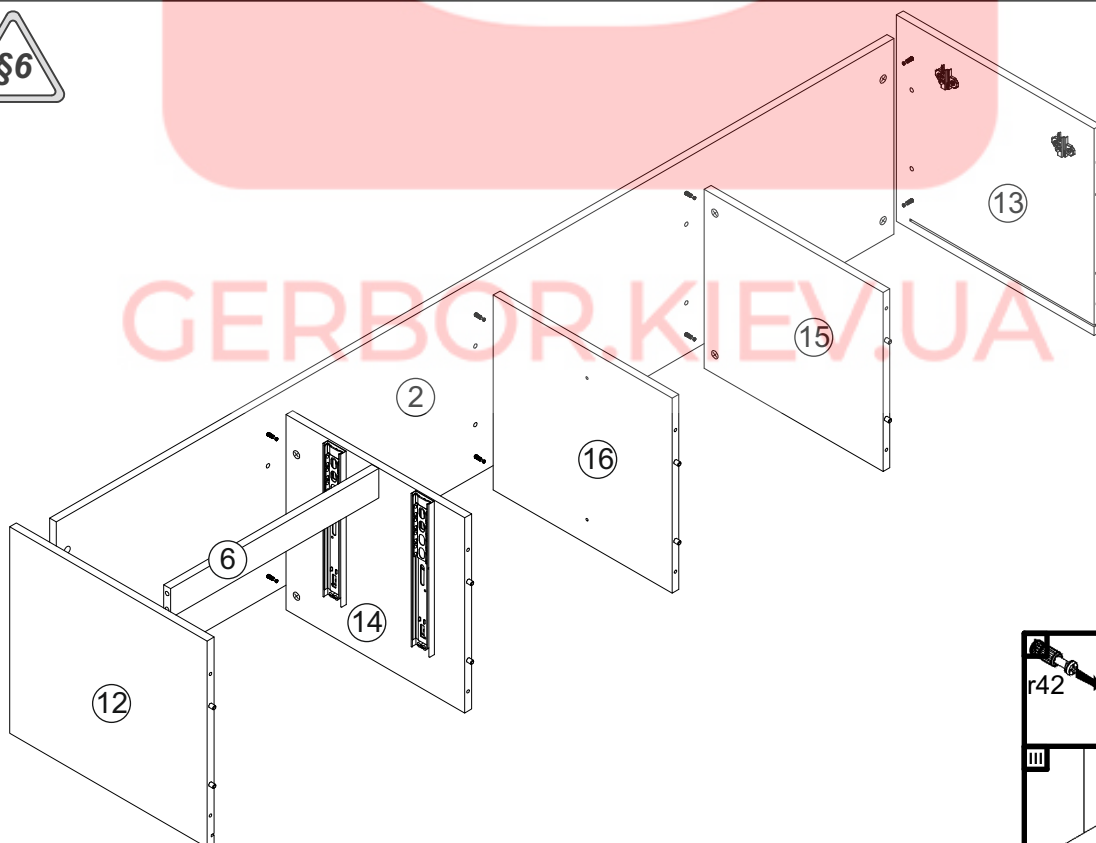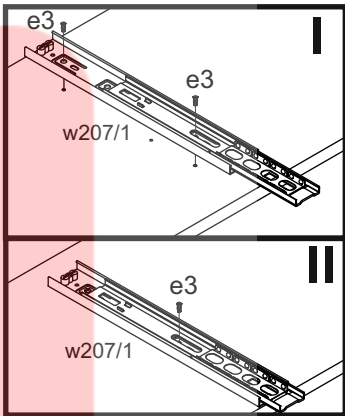

3

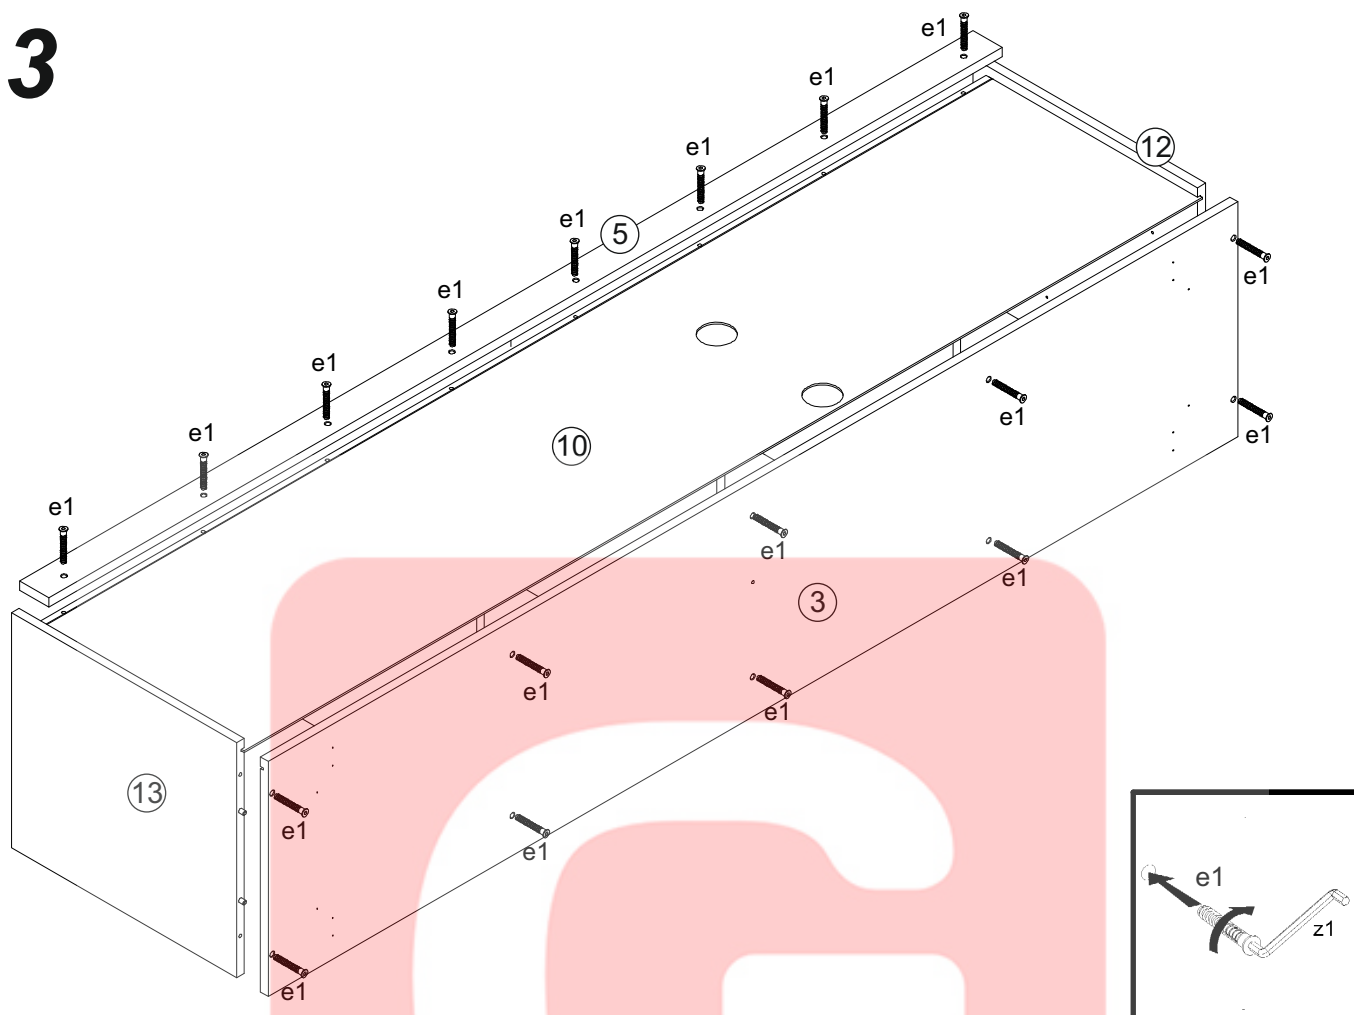

4

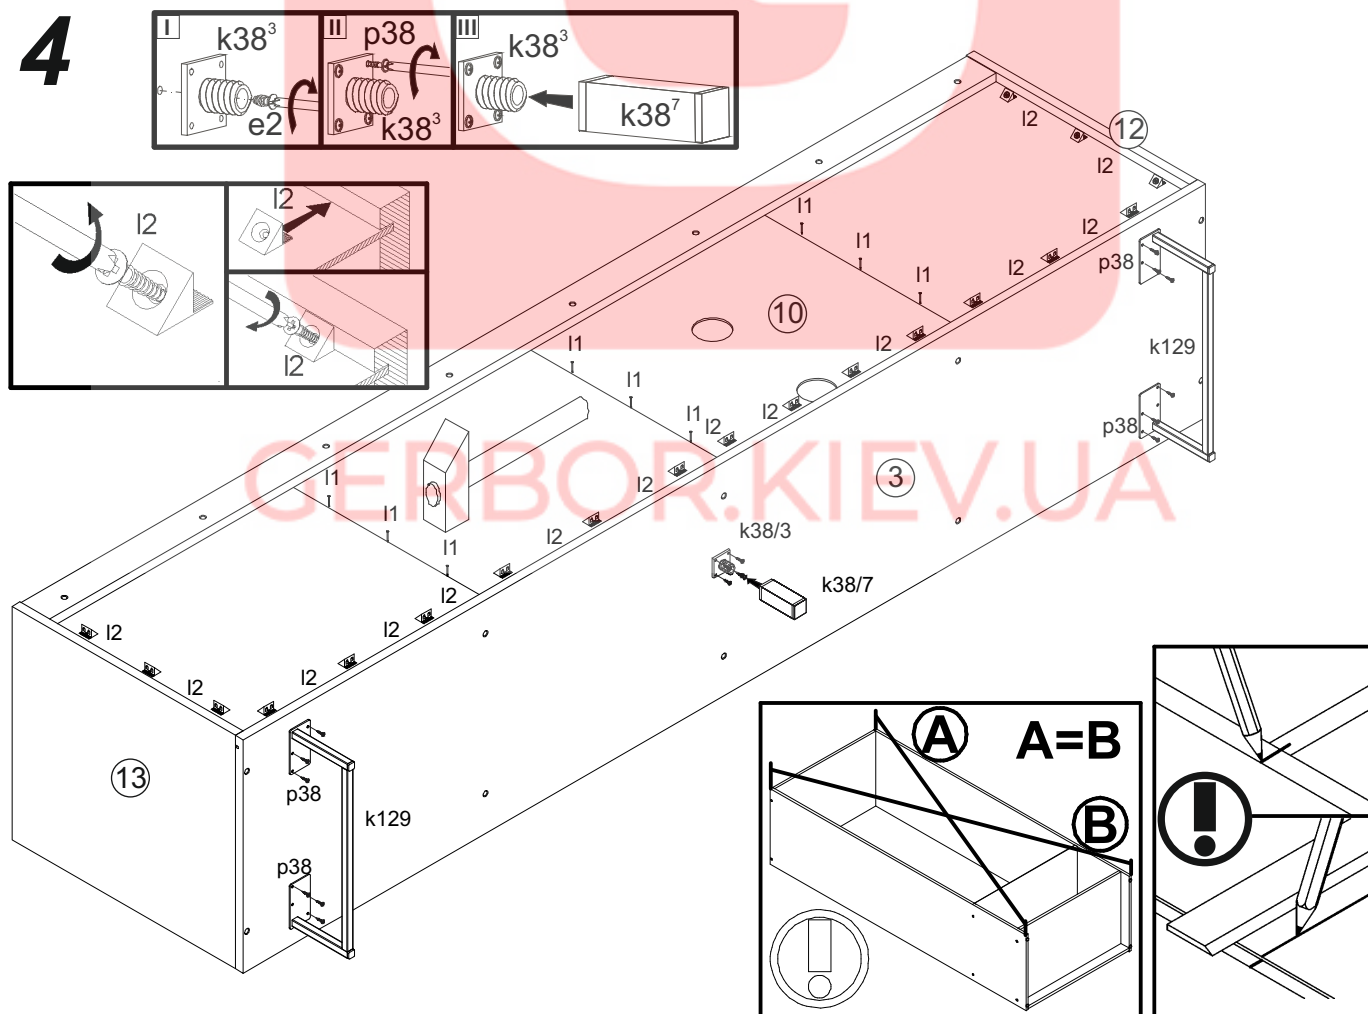

5

Diagram 5 illustrates the assembly of the bottom panel (7) and side panels (8). The bottom panel (7) is shown with a track (p1) being attached to its top edge using screws (e32). The side panels (8) are then attached to the bottom panel (7) using screws (p140). The diagram also shows the attachment of the bottom panel (7) to the side panels (8) using screws (p140). The bottom panel (7) is labeled with 'w207/2' and the side panels (8) are labeled with 'w207/2'.

