

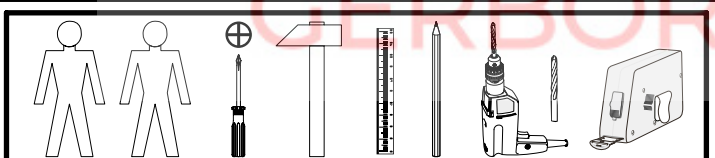
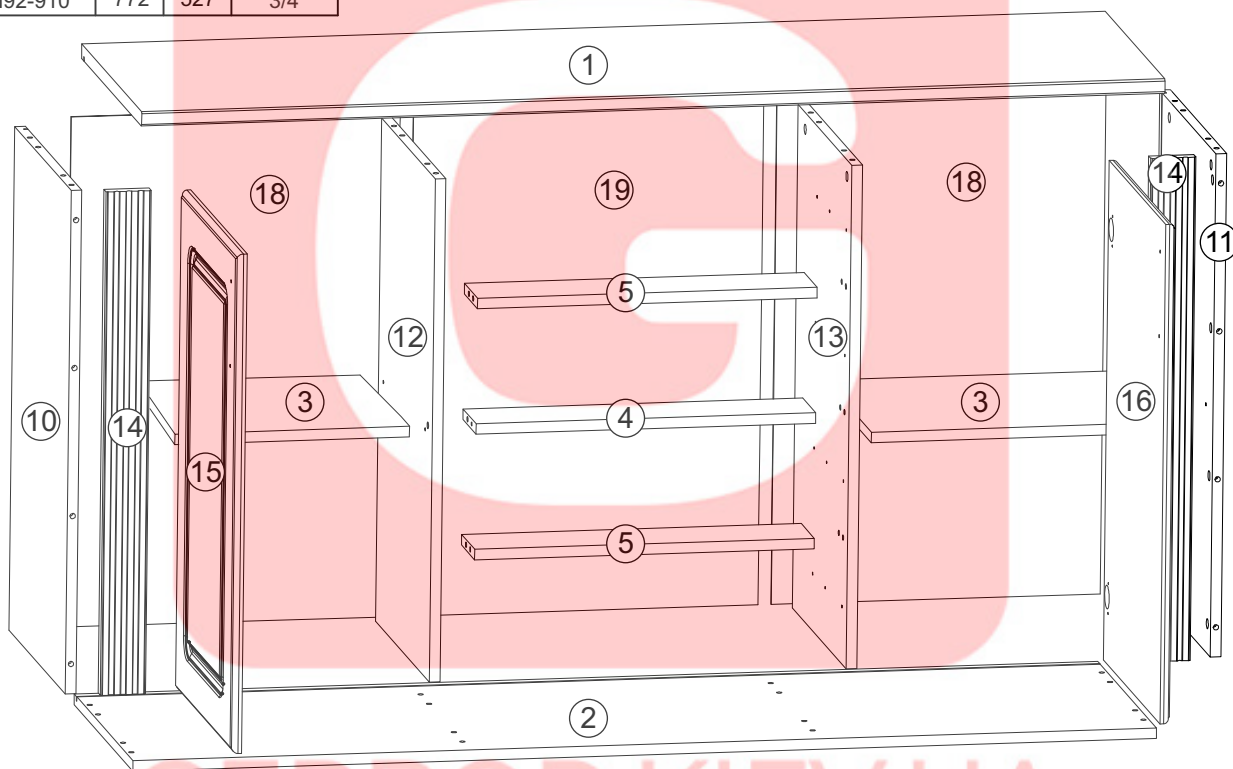
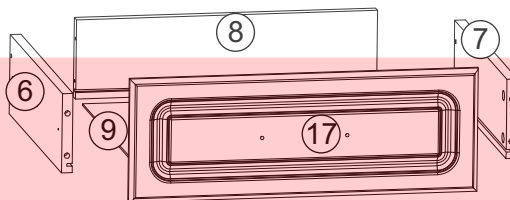


A	B	C	D	
1	N92-213	1540	460	1/4
2	N92-214	1540	451	1/4
3	N92-311	482	412	1/4
4	N92-401	511	100	1/4
5	N92-404	511	100	1/4
6	N92-509	400	120	1/4
7	N92-510	400	120	1/4
8	N92-511	453	120	1/4
9	N92-904A	468	400	1/4
10	N92-117	762	432	2/4
11	N92-118	762	432	2/4
12	N92-119	762	412	2/4
13	N92-120	762	412	2/4
14	N92-720	762	68	2/4
15	N92-014	756	434	3/4
16	N92-015	756	434	3/4
17	N92-016	186	524	3/4
18	N92-909	772	495	3/4
19	N92-910	772	527	3/4


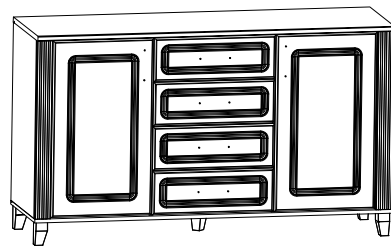


5x k21 ¹	5x k21 ²	10x φ3,5x16 mm p38	4x a132	2x a133	4x b43	8x φ3,5x15 mm p51	8x φ6,3x13 mm e2
6x Φ.412.083	12x M4x20 mm j1	10x 7x50mm e1	32x φ15x12mm #16 r1	32x r42	26x f1	8x φ5x17 mm d1	20x l2
28x ø16 s2	1x z1	8x w208/1	8x w208/2	24x φ6x13 mm e3	24x φ3,5x12 mm p140	16x φ5x50 mm e32	10x 20x13x3,51mm n108
10x φ2,9x16 mm p55							


1

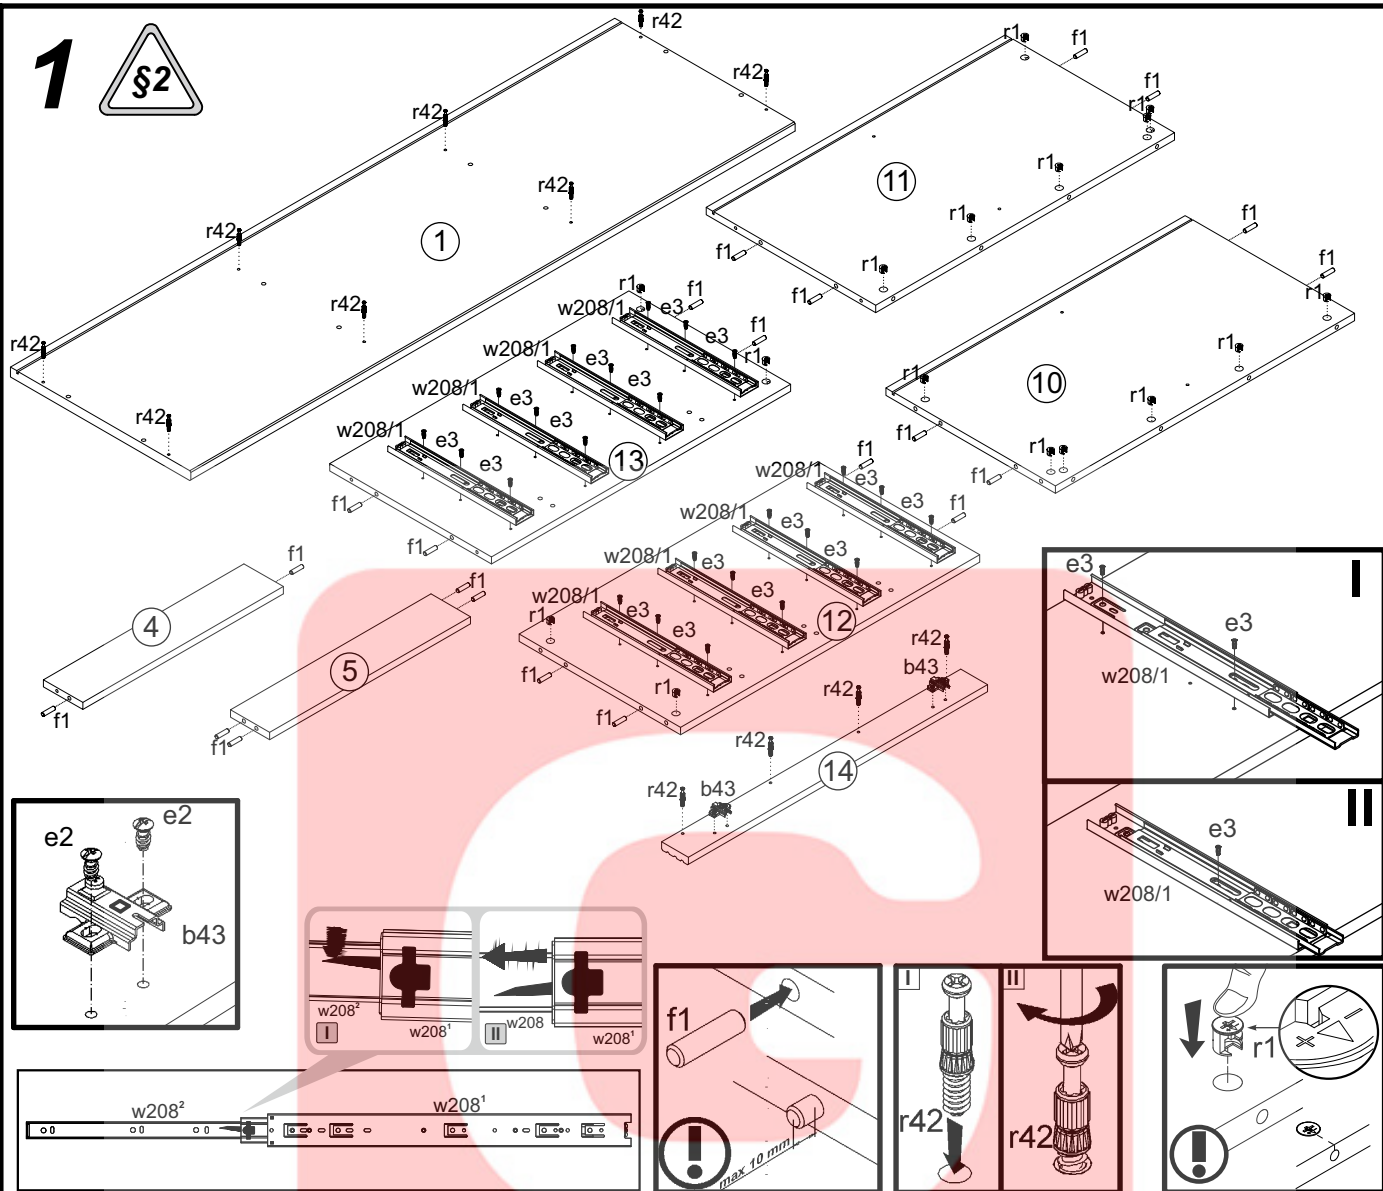


2

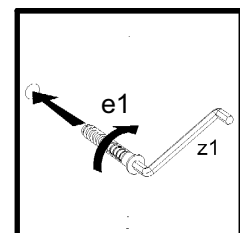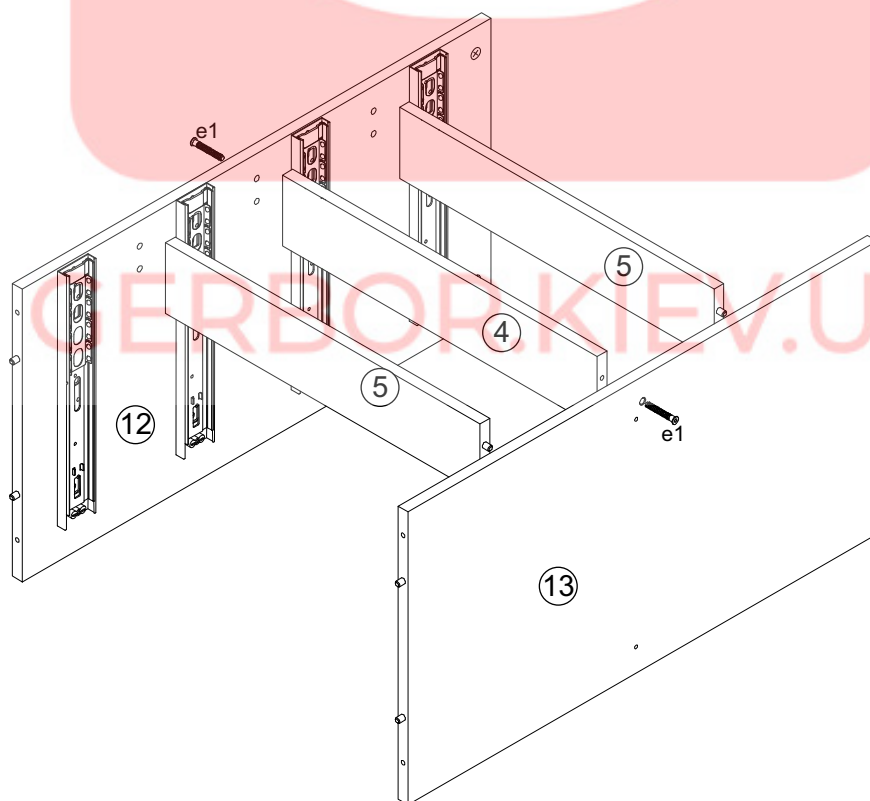

3

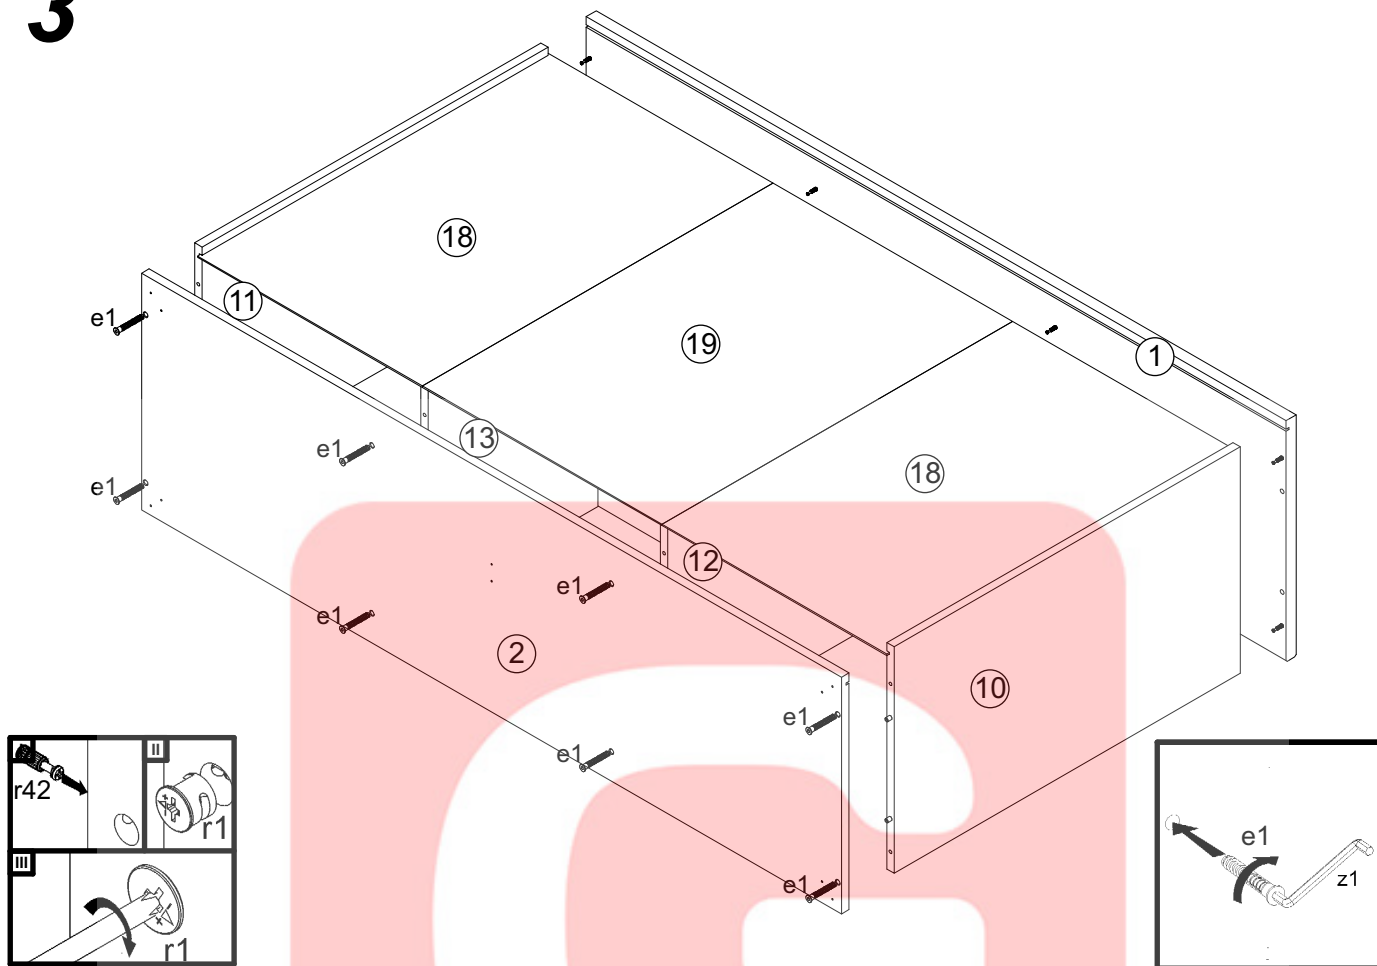

4

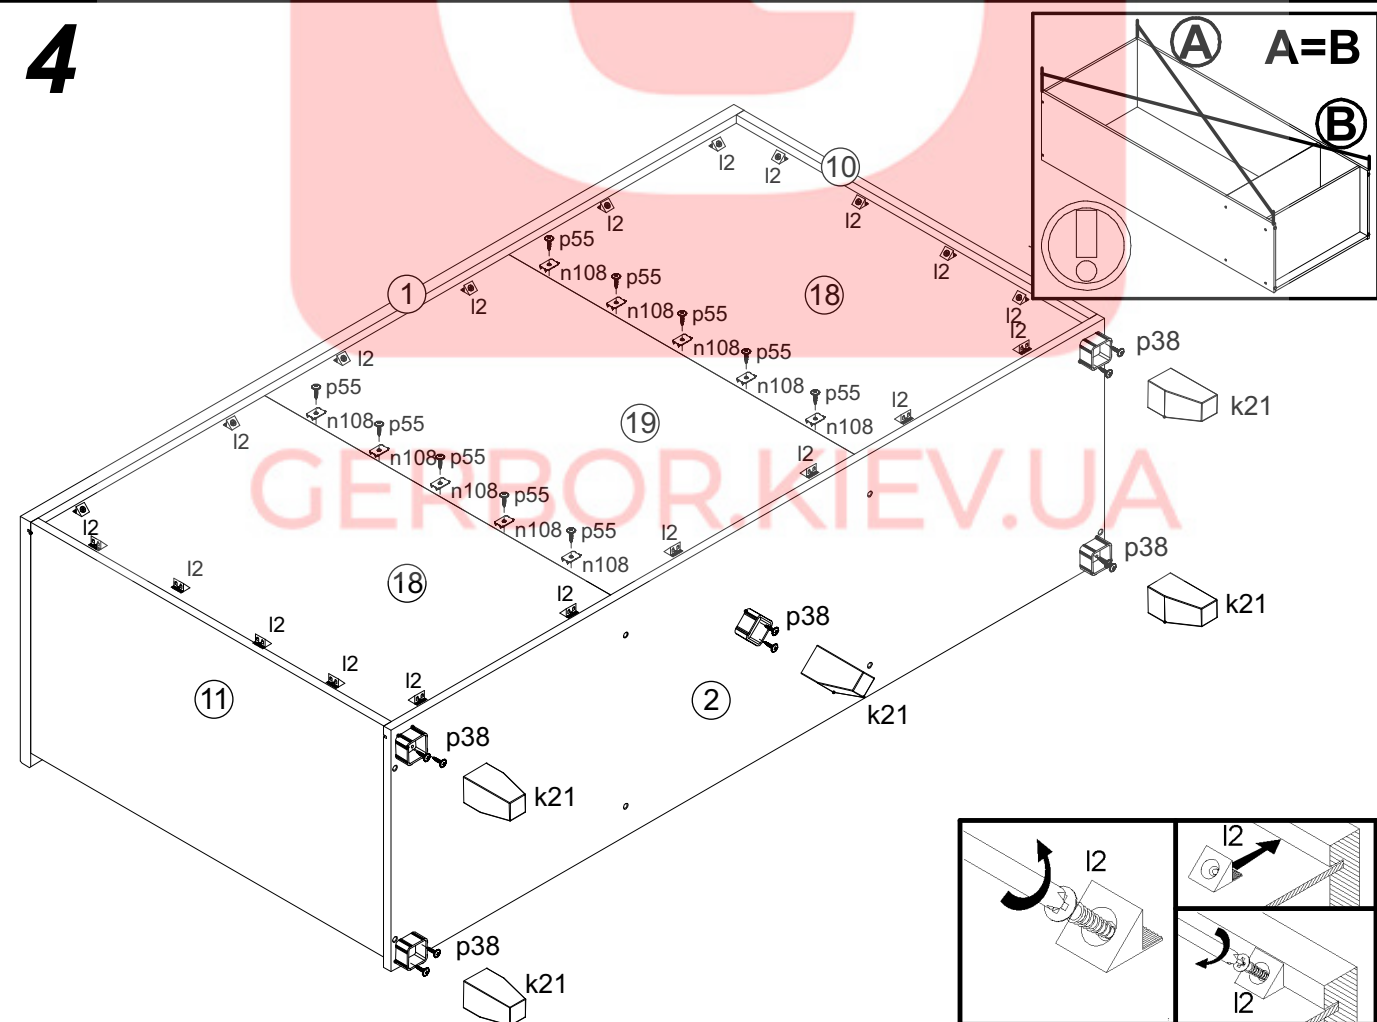

Assembly diagram for a kitchen cabinet showing the installation of a door and drawers. The main diagram shows a cabinet with drawers (17) and a door (15). Callouts show the installation of various components: r42, r1, a132, p51, a133, b43, s2, d1, w208, and w208. A warning symbol §21 is also present.